

Safety tips:

There are things that you can do to reduce risk in your home.

- Move beds, cots and furniture away from the window.
- Do not let cords or chains hang loose. Make sure they are kept out of reach of children at all times.
- Do not tie loose cords and chains together.
- Check the condition of all safety devices if not used regularly and replace if the device is faulty.

Operating your motorised blind:

Operating instructions for your motorised blind will be issued with your remote control.

A copy can also be downloaded by scanning the QR code which can be found on the back of the remote control.

Operating your Sidewinder blind:

- Simply pull the chain to move the blind up and down.

Roller blind

How to fit and use your Child Safety Devices

1

Warning

Blinds can be potentially dangerous to small children. Please be aware that swallowing small parts can cause internal asphyxiation. Looped or low hanging cords, chains or tapes can create hazardous loops which could lead to the risk of strangulation. We do everything we can to ensure your chosen product is child safe. As a minimum all of our blinds meet the European Standard BS EN 13120 for safety. Our instructions and the supplied Child Safety device(s) are intended for you to ensure that your blind is as safe as possible.

The information below gives guidance for fitting the provided child safety devices. All safety devices must be correctly installed for the protection from strangulation of young children and the proper use of the blind. Please read the instructions carefully and keep safe for future reference.

Only use the devices and cords provided with your blind. Videos showing how to fit and reconnect child safety devices are available, along with replacements at www.makeitchildsafe.co.uk.

2

Sidewinder Roller

Fitting the safety hook

1. Put the control chain into the hook at the maximum distance from the control mechanism. Ensure that the chain is taut and that the hook is at the bottom of the loop.
2. Screw the hook to a wall adjacent to the blind. If the hook has a slot, ensure the screw is placed at the bottom of the slot and that the chain is taut before screwing in place. This will prevent the hook from moving up and down during operation and ensure that the correct tension is maintained. See fig. 1.



fig 1

3

Sidewinder Roller (with breakaway chain)

The chain break connector allows the chain to break apart if any reasonable force is placed on the loop. Do not use safety hooks with chainbreak connectors. Only use the supplied chain with the device.

To reconnect the chain break connectors

1. Check that the connector is not damaged.
2. Join the control chain by clicking the two halves of the component together. See fig. 2.



fig 2

Operating your Luxury and Super Lux blind:

- Release the pin (do not pull all the way out) from the front side of the spring before operation See fig 1.

With a Luxury operated blind, gently pull the blind down to the required position and release the tension slightly so that the spring locks. To wind the blind back up, pull down slightly to release the spring, then guide the blind into position.

- With a Super Lux blind, gently pull the blind down to the required position and release the tension slightly so that the spring locks. To wind the blind back up, pull down slightly and release the blind which will raise to a fixed point. If a different height is required, guide the blind up as per Luxury operated.

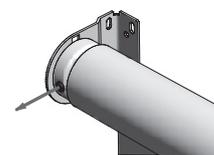


fig 1